


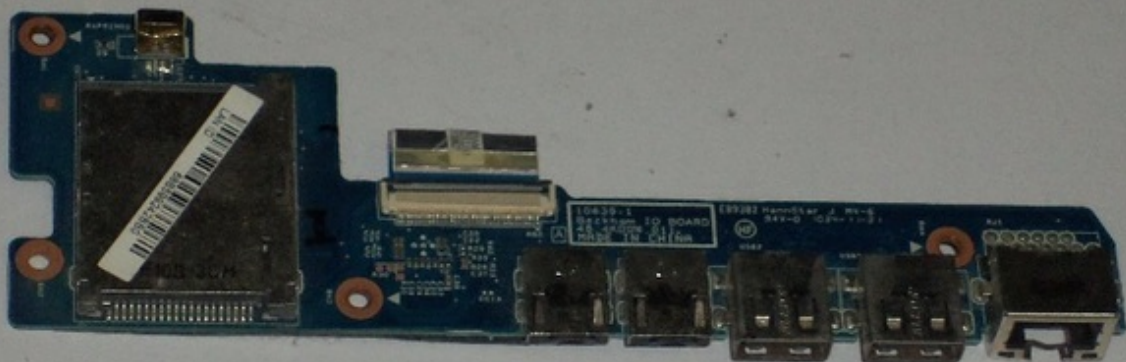

# HP Pavilion DM3-3010US Sound Card Replacement

Your Laptop sound is not working properly and you need to replace your sound card.

Written By: michael mannen



## Step 1 — Sound Card



- Flip laptop over.

## Step 2




- Eject Battery

## Step 3



- Place battery to the side.

## Step 4

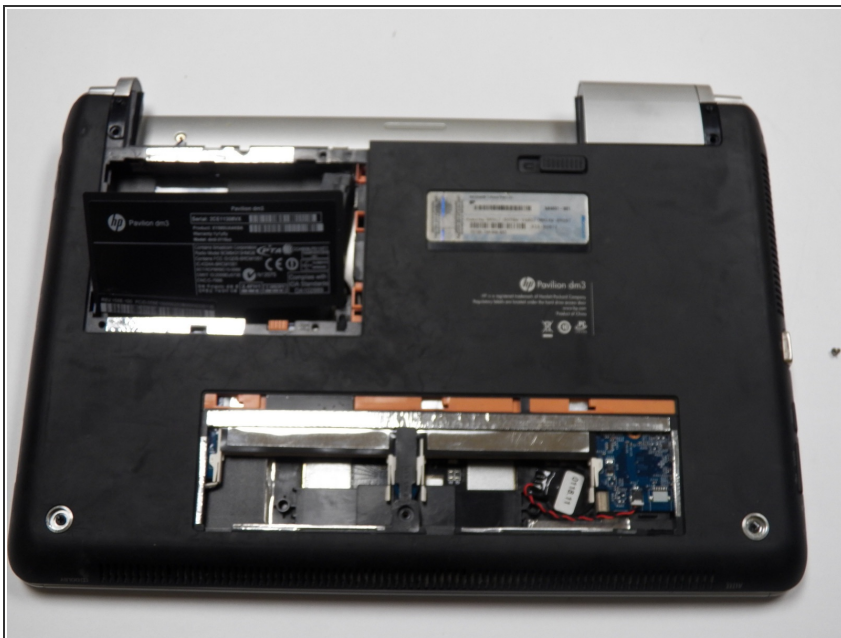

- Underside view with necessary parts removed.



## Step 5



- Look for the eject button.

## Step 6



- Locate Screws.

## Step 7



- Locate hard-drive.

## Step 8




- Locate screws

## Step 9



- take out hard drive.


## Step 10

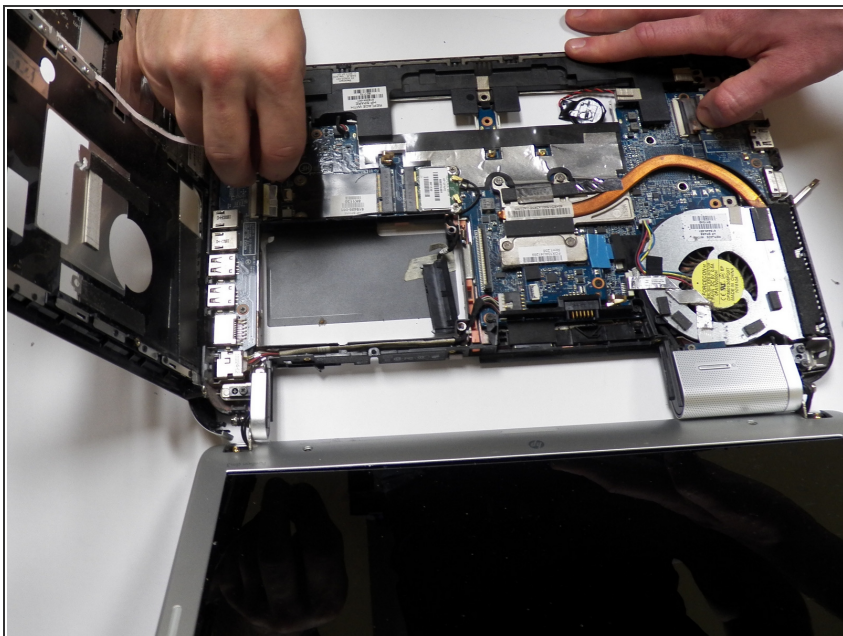

- HP Pavilion DM3-3000 Series Audio USB Card Reader Board w/Cable




## Step 11

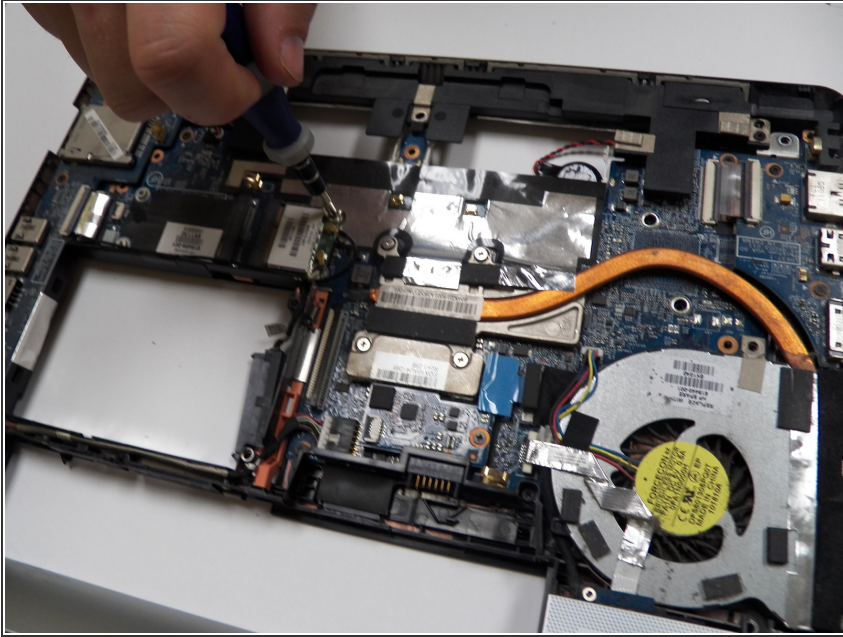


- Unscrew the Series Audio USB Card Reader Board w/Cable.

## Step 12

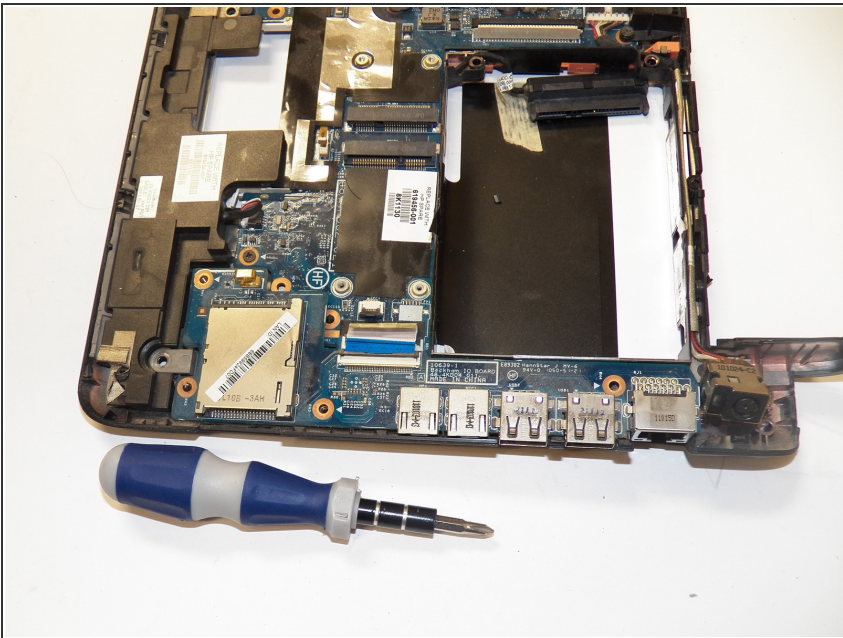


- Base with removed Series Audio USB Card Reader Board.

## Step 13

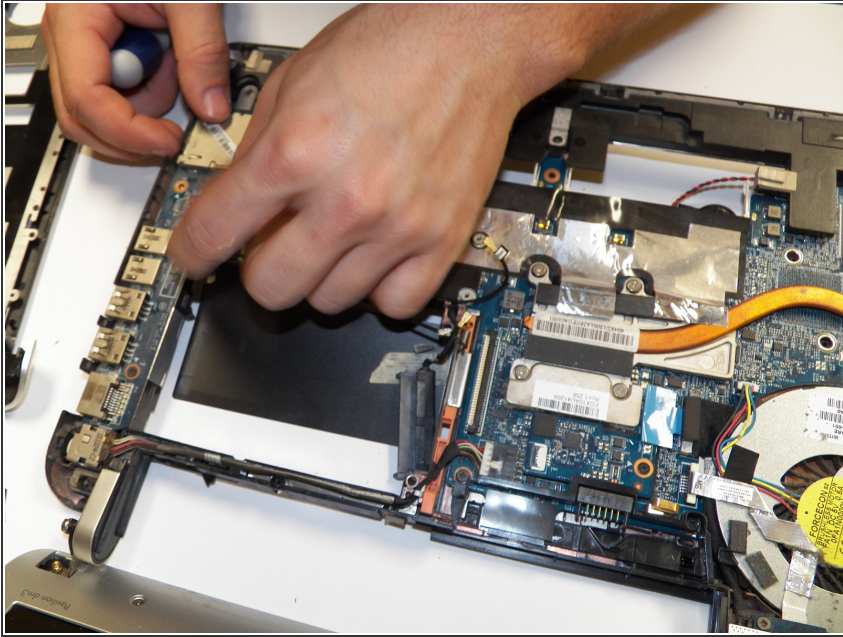

- Take out audio driver.

## Step 14

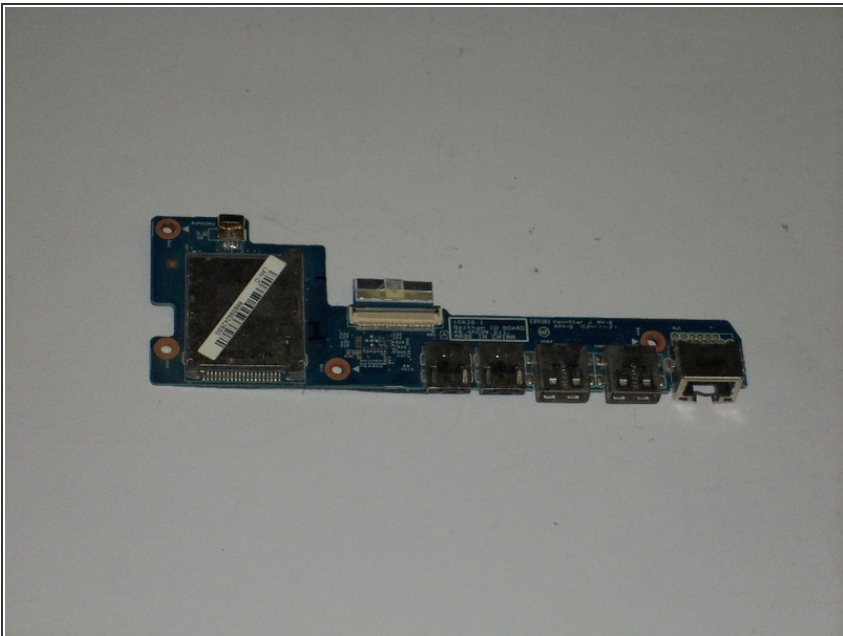

- HP Pavilion DM3-3000 Series Audio USB Card Reader Board w/Cable

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-25 11:00:11 AM.